



XR80 IMPLANT CHAMBER CLEAN PM PROCEDURE (CONT'D):

Implant Chamber – PreClean

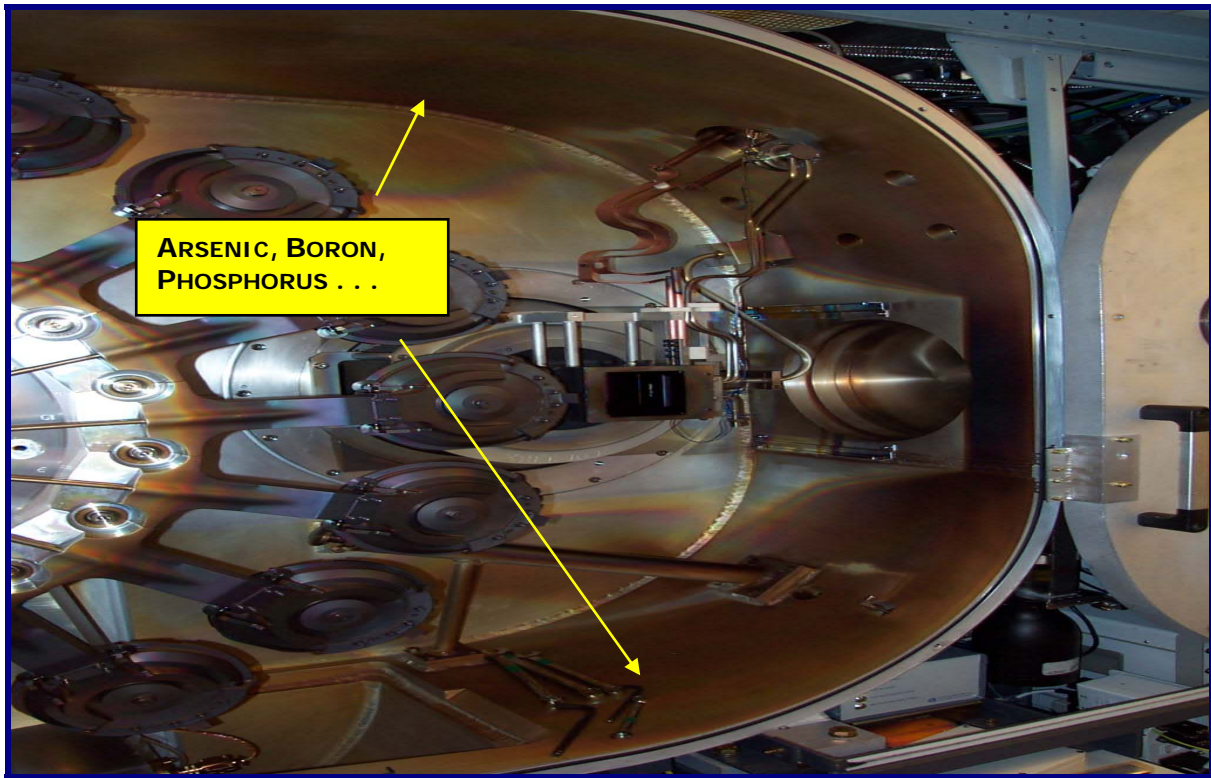

XR80 IMPLANT CHAMBER CLEAN PM PROCEDURE (CONT'D):

Implant Chamber – PostClean

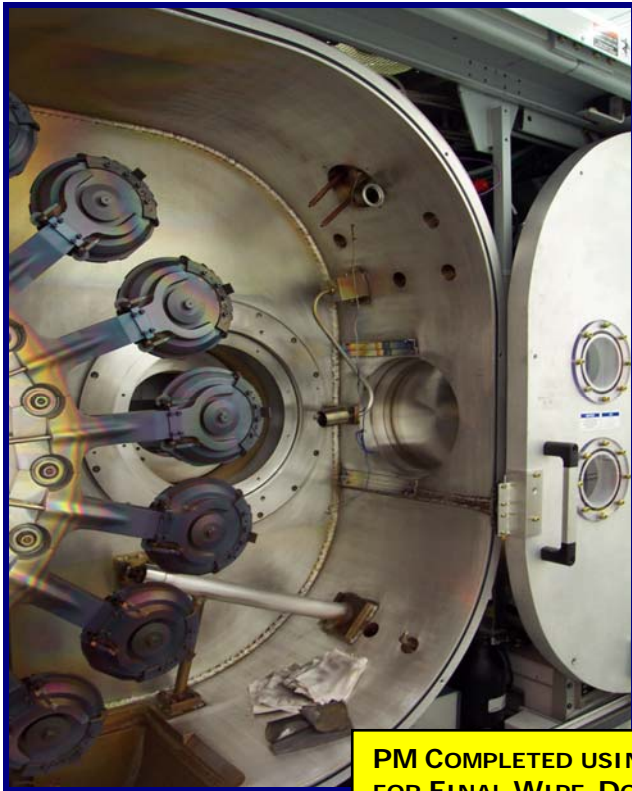

**ENTIRE AMOUNT OF WASTE GENERATED
UPON COMPLETION OF THIS CHAMBER
PM.**

**PM COMPLETED USING ONLY DI WATER AND IPA
FOR FINAL WIPE-DOWN**

NO H₂O₂ (HYDROGEN PEROXIDE)

XR80 IMPLANT CHAMBER CLEAN PM PROCEDURE (CONT'D):

