


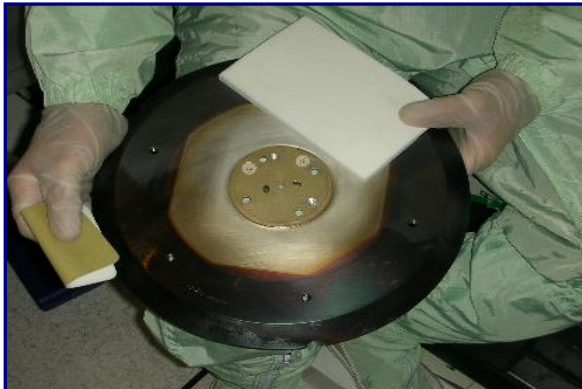

AMAT QUANTUM – X™ ESC CLEAN

PROBLEM: Having To Use ScotchBrite
Leaving Particle & Metal Contaminants
Not Able To Effectively Remove Deposition Using Current Fab Wiper

SOLUTION: FOAMTEC INTERNATIONAL CLEANING TECHNIQUE
Diamond ScrubPAD
UltraSOLV® Foam Sponge
MiraWIPES®



Showing How Much More Deposition The Foamtec International MiraWIPE® Was Able To Remove From This Critical Part After Completely Wiping With Standard Fab Wiper