


cleaning critical surfaces

UltraMOP™III Clean Room Mop Refills




Available in 7", 12", and 14" lengths

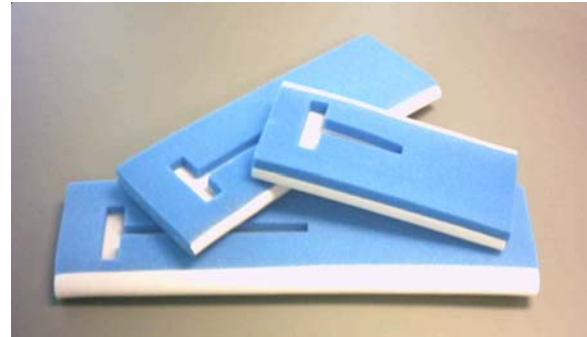




Description

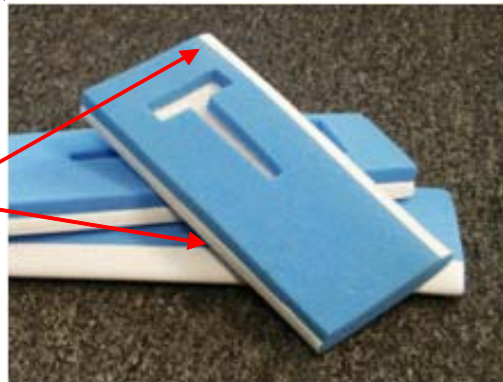UltraMOP™III is constructed of snag-resistant fabrics laminated to a super, fine pore urethane foam to enhance application of disinfectant to clean room surfaces. The Bump-Proof® Wrap-Around design ensures that the leading and trailing edges do not generate particles resulting from abrasion damage. The fabric layer wraps over both the leading and trailing edges improving cleanliness and durability. Mop heads are available in Microfiber laminated versions to provide unsurpassed cleaning efficiency especially for stubborn contamination such as hardened Biofilms and disinfectant residue. The exclusive Bump-PROOF® Wrap-Around design is ideal for cleaning and disinfecting ISO Class 1 clean rooms. Compatible with gamma, autoclave and ETO sterilization methods. Mop refills fit GEERPRES® wall washing handles.

Polyester fabric with Bump-PROOF® Wrap-Around construction eliminates rollover, abrasion-related particles and enables a smooth, skip-free motion to enhance disinfectant laydown.



Advantages

-  **Improved cleaning and disinfection.** Constructed of a proprietary, super, fine pore polyurethane foam that is ideal to laydown a precise volume of disinfectant cleaner.
-  **Improved cleanliness.** Laminated fabric covers the leading and trailing edge preventing abrasion related particle contamination.
-  **Product traceability.** Available with Lot Certification of Conformance to ease audit and validation procedures.
-  **Simple to Use.** Bump-PROOF® Wrap-Around design eliminates the need for protective polyester sock.
-  **Robust cleaning.** Micro fiber versions remove stubborn contamination and are excellent where dry floors are desired.

GEERPRES® is a registered trademark of GEERPRES, Inc.



Rev. E

www.foamtecintlwcc.com

USA +1.866.922.7160 +1.760.599.7160 fax +1.760.599.7322 Thailand +66.3531.4000 fax +66.3531.4007



Bump-PROOF® Wrap-Around design prevents abrasion generated particles.

Part Numbers

T-Bar Style Mop Head Refills

<u>Part Numbers</u>	<u>Description</u>	<u>Lamination</u>	<u>Length</u>
FS700	UltraMOPIII	Polyester	7" / 17.8cm
FS700ST	UltraMOPIII Sterile	Polyester	7" / 17.8cm
FS701	UltraMOPIII	Polyester	12" / 30.5cm
FS701ST	UltraMOPIII Sterile	Polyester	12" / 30.5cm
FS702	UltraMOPIII	Polyester	14" / 35.5cm
FS702ST	UltraMOPIII Sterile	Polyester	14" / 35.5cm
FS703	UltraMOPIII	Microfiber	7" / 17.8cm
FS703ST	UltraMOPIII Sterile	Microfiber	7" / 17.8cm
FS704	UltraMOPIII	Microfiber	12" / 30.5cm
FS704ST	UltraMOPIII Sterile	Microfiber	12" / 30.5cm
FS705	UltraMOPIII	Microfiber	14" / 35.5cm
FS705ST	UltraMOPIII Sterile	Microfiber	14" / 35.5cm
FS750	UltraMOPIII, Mini	Microfiber	4" / 10.2cm
FS752	UltraMOPIII, Mini	Polyester	4" / 10.2cm

All versions of the UltraMOP™III are Lot certified and designed to fit GEERPRES® and Contec wall washing mop frames. All versions of the UltraMOP™III are compatible with Gamma, ETO and autoclave sterilization. All mops are Lot traceable back to raw materials.

Packaging: 4/Bag, 8 Bags/Case

Autoclave Settings

Exposure Temperature:	121°C
Exposure Time:	30 Minutes
Cycle Type:	Gravity
Cycle Time:	20 Minutes
Pressure:	17.5 psig

Physical Properties

	Average
Density	2.09
Pore Size	73
Tear Strength	3.38
Tensile Strength	23



Foamtec
International
Wiltshire Contamination Control Division

www.foamtecintlwcc.com

USA +1.866.922.7160 +1.760.599.7160 fax +1.760.599.7322 Thailand +66.3531.4000 fax +66.3531.4007